

Miele Dishwasher Not Draining

Step-by-Step Troubleshooting Guide

Step 1: Remove and clean the filter assembly (twist counter-clockwise)

Step 2: Check drain hose for kinks behind/under dishwasher

Step 3: Check garbage disposal knockout plug if disposal was recently replaced

Step 4: Inspect check valve at drain pump outlet for cracks or debris

Step 5: Check for drain pump impeller obstruction (broken glass, pits, bones)

Step 6: Note any F-code displayed (F11 = drain not completing)

Step 7: Flood protection triggered? Check base pan for water accumulation

Maintenance: clean filter every 4-6 weeks to prevent most drain issues
